



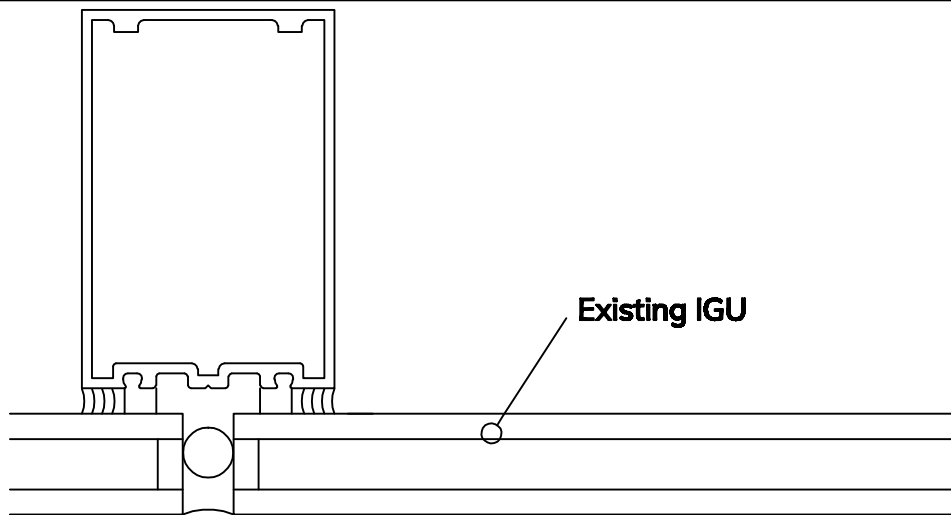

Before Installation of Glare Repair™

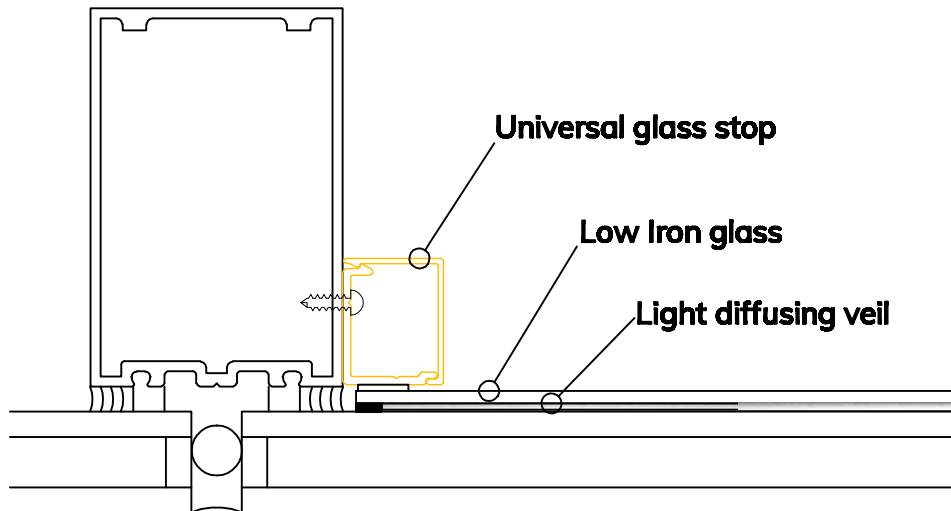

After Installation of Glare Repair™

Measuring

- Measure inside dimensions of the IGU (width + height).
- Universal glass stop will cover rubber stops & VHP tape once installed.
- Deduct 0.25-0.38 in. from each dimension.
 - → Allows room for rubber glass stops & sealant.

Preparing Existing IGU For Permanent Install

- Clean interior glass surface of existing IGU completely.
- Use isopropylamine (or equivalent) to remove dirt, oil, and marks.
- Ensure glass is dry, spotless, and contaminant-free before installing.

Installing Glare Repair™

1. Dry Fit
 - Ensure rubber glass stops are installed as required (especially at bottom).
 - Test fit Glare Repair™, mark position on frame.
2. Final Install
 - Remove Glare Repair™, peel protective cover from VHP tape.
 - Re-align with reference marks, rest bottom on stops.
 - Tilt/pivot into place and press perimeter firmly for full adhesion.
3. Seal
 - Apply a small bead of clear silicone between frame & Glare Repair™ perimeter.
 - Install universal glass stop per typical IGU SOP.

Final Cleanup

- Wipe Glare Repair™ surface clean of prints/dust.

Solera®

**ADVANCED
GLAZINGS LTD**

Glare Repair™ (Solera GR™) Installation Guide

DATE:

2025.09.04

DWG NO.01

REV:

001